
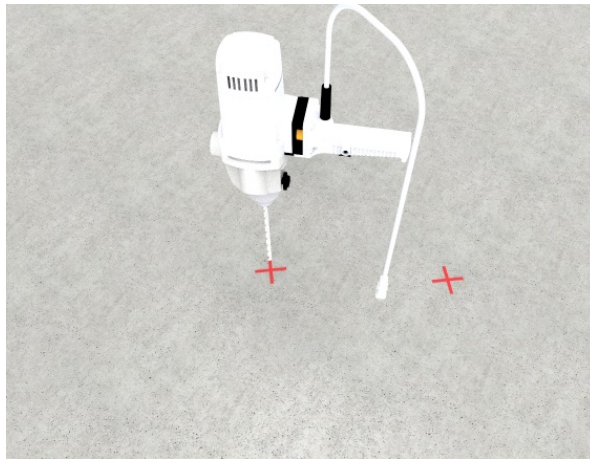


To mount the **BOX** litter bin you will need the following tools:

1. Hammer drill with plug drill for concrete: diam. 8 / 10 mm
2. Iron hammer
3. Hex wrenches
4. Triangular key supplied

You will use the following screws:

- (4) anchors M8 or M10 x 100/120mm

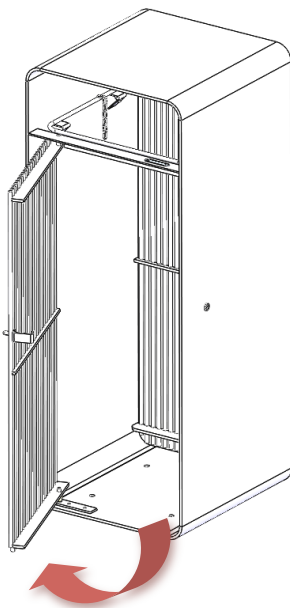

1. Place the litter bin and open the door with the supplied key.
2. Make four holes with the hammer drill in correspondence to the base holes for M8 or M10 anchors.
3. Double check alignment and insert the M8/M10 anchors in the holes.
4. Re-close the door.