



To place the FUMA ashtray, following tools are required:

Rotary hammer drill bit with diam 8/10 mm suitable for the type of material to be drilled

And following screws are required:

n °2 M8x90mm dowels (not supplied)

n °4 M5 head screws with relative washers

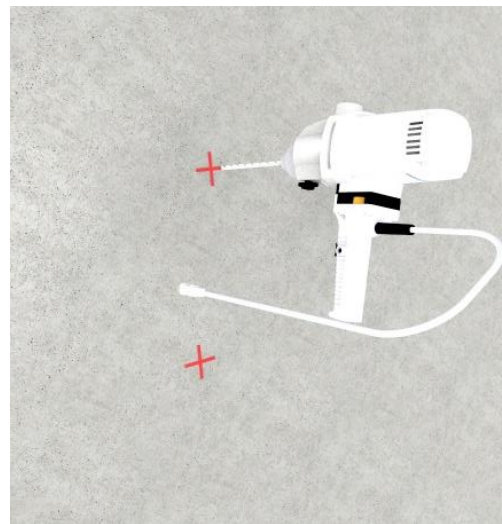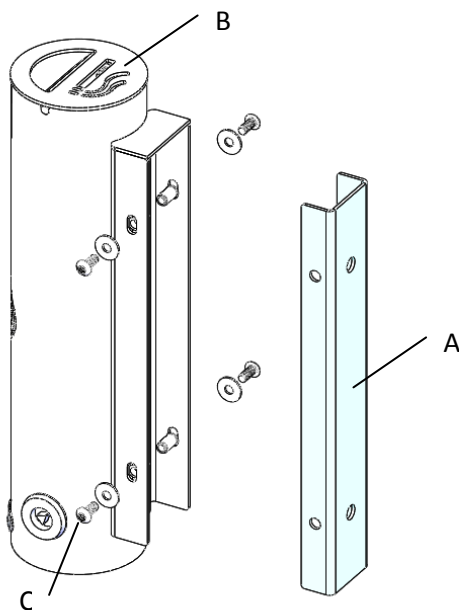

- Place the support bracket (A) close to the surface on which you want to install the ashtray and mark holes position
- Drill no. 2 holes for M8 dowels in correspondence with the marked holes and then mount the bracket
- Using the supplied screws (C), mount the ashtray (B) on the bracket previously fixed.